

# User's Guide



Handzender

## User Instructions

1. The device is operated with a radio remote control. This consists of a hand-held transmitter and a receiver. The receiver is paired with the gas control block.
2. The receiver and gas control block are located in the control box.

## 1. Operation (Remote Control)

### 1.1. Lighting the fire.

On the handheld transmitter, press the **OFF** 🔥 and (large) simultaneously. A short beep will confirm the start. This will be followed by short beeps until the pilot light and main burner are ignited. After the main burner is ignited, the flame height will automatically go to the maximum setting.

## 2. Setting the flame height / Extinguishing the fire.

2.1. Press key 🔥 (small) to lower the flame pattern and to turn off the burner.

2.2. (Extinguishing the fire: "STAND BY"). (Briefly pressing key gradually lowers the flame appearance).

2.3. Press 🔥 (large) key to increase the flame pattern. (Pressing key briefly gradually increases the flame pattern).

## 3. Turning off the device.

3.1. Press key 🔥 (small) to lower the flame pattern and to turn off the burner ("STAND BY").

3.2. Then press key OFF to turn off the entire appliance, including the pilot light.